



Intruder System for Communicall Vision 2

user instructions



www.tunstallgroup.com

Our policy of continual development means that product specification and appearance may change without notice. Tunstall Telecom Limited is a member of Tunstall Group Ltd. © 2005 Tunstall Group Ltd.

© TUNSTALL is a registered trade mark of Tunstall Telecom Limited.

Tunstall Telecom Limited, Whitley Lodge, Whitley Bridge, Yorkshire DN14 0HR
Telephone: 01977 661234 Facsimile: 01977 662450 e-mail: sales@tunstall.co.uk

Tunstall

All the reassurance you need


All the reassurance you need

Tunstall

Intruder System user instructions

Your Communicall system is provided with an intruder alarm facility designed to provide peace of mind and reassurance that your home and contents are protected. If an intruder is detected when you are out then an alarm call will be sent to either your on site manager or off site response centre who will be able respond as required. The system includes a key switch, Quickset button on your speech module and contacts on your windows and doors.

Additional movement sensors may be fitted where required.

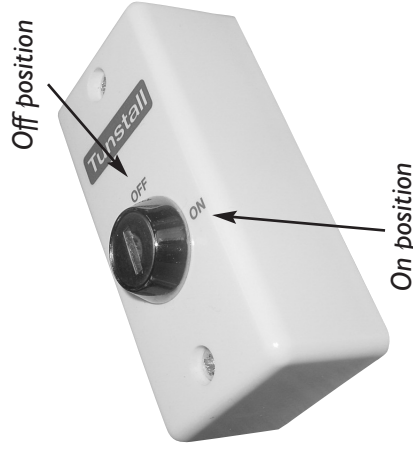

What to do when you go out

- Use the key to switch the system to the On position.
- The speech module will start to bleep (exit tones)
- Remove the key from the switch closing the front door behind you as you exit your dwelling

The bleeps will last for 30 seconds to give you sufficient time to leave your home. After that time the bleeps stop and the red light next to the Quickset button flashes to show the system is on.

If anyone should open a window while the system is On a silent alarm will be automatically generated. If anyone opens the door an alarm will be raised after the 30 seconds of entry tones. Tampering with the key switch, contacts or removing the speech module will automatically raise an alarm.

What to do when you return home.

- As you enter through the front door the speech module will start to bleep. (Entry tones)
- Use the key to switch the system to the Off position.

The speech module will bleep for up to 30 seconds with an increasing urgency until the system is switched off. If the system is not switched Off within this time a silent alarm will be generated.

Frequently asked questions

Why, when I switched the system On did it bleep with low tones before reverting to normal exit tones?

This is a warning message to tell you that one or more windows are open. Please switch the system to Off and close any open windows before switching On again and leaving your home.

Can I switch my system On overnight while I am asleep?

Yes you can if you are not using movement sensors. Simply use the key to switch On and ignore the 30seconds of exit tones. Pressing the Quickset button after switching On can mute these tones and switch the system on immediately. Please remember to switch the system to Off in the morning before opening any windows or front door.

Can I switch it On overnight and still leave a window slightly open?

Yes you can. Please be aware that the warning (low) tones will sound indicating an open window. If this is ignored the system will still switch On and monitor the door only.

What happens if I use my back door instead of my front door most frequently?

Please inform the installers who will be able to ensure the back door becomes the entry exit door.